

This kit includes:



- A - Washers (2)
- B - Lock Washers (2)
- C - 5mm Allen wrench
- D - Pocket Rocket™ Handlebar Replacement bolts (2)
- E - Adapter
- F - Qili™ Charger
- G - Controller (CT-201C6)

**NOTE:** The supplied adapter (6-pin connector on one end and 4-pin & 2-pin connectors on the other end) is only applicable to certain Pocket Rocket products.

If your existing controller has a 6-pin connector, the replacement controller will require use of the adapter.

- The 6-pin connector of the adapter should be connected to the Pocket Rocket.
- The 4-pin & 2-pin connectors of the adapter should be connected to the new controller.

If your existing controller already has a 4-pin and a 2-pin connection, disregard connecting the supplied adapter.

**⚠ CAUTION:** To prevent shock, turn power switch off before installing the new controller.

### Step 1a: Remove the motor cover

Using the supplied 5mm Allen wrench, remove the two screws that hold the plastic seat to the frame (see Figure 1a).



Figure 1a

### Step 1b:

Remove the plastic seat. The controller is located under the seat section (see Figure 1b).

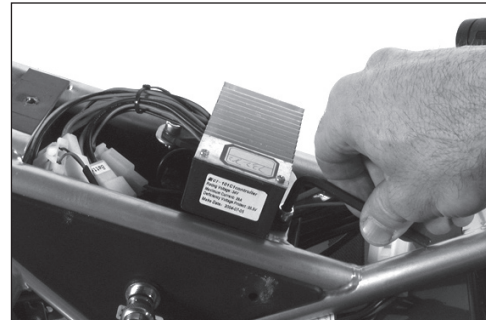


Figure 1b

### Step 2: Unplug the wire connections

Carefully unplug the 5 wiring connections attached to the controller. Each connector is a snap-lock type connection that requires depressing a small tab to allow the connector to release (see Figure 2). Do not attempt to disconnect by pulling on the wires!



Figure 2

### Step 3: Remove the old controller

Using the 5mm Allen wrench, remove and save the two mounting screws that secure the old controller. You should now be able to remove the old controller (see Figure 3). Discard the old controller.

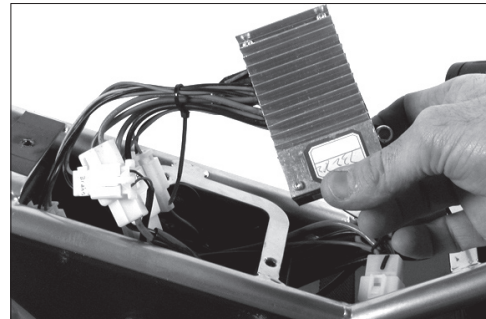


Figure 3

#### Step 4: Reconnect the wire connections

Reconnect all plug-in connections (see Figure 4a). Each connection point is unique, so the system can only be connected in one way: the right way.

**Note:** If your existing controller has a 6-pin connector (see Figure 4b), the replacement controller will require use of the supplied adapter.

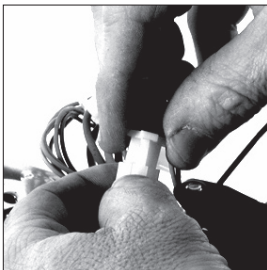


Figure 4a

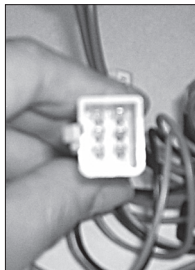


Figure 4b

#### Step 5: Secure the new controller

Secure the new controller in place and tighten the mounting screws (see Figure 5). Reattach plastic cover to frame (see Figure 1a).

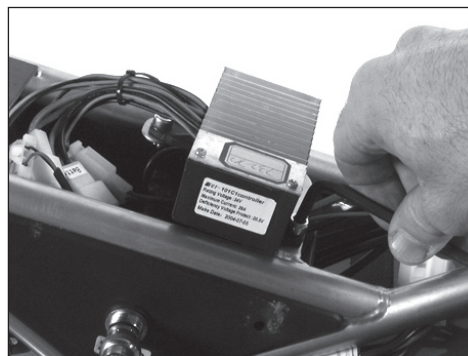


Figure 5



### POCKET ROCKET™ HANDLEBAR BOLT REPLACEMENT

#### Step 1: Remove the old bolts

Using the supplied 5mm Allen wrench, remove and discard the old bolts (see Figure 1a).

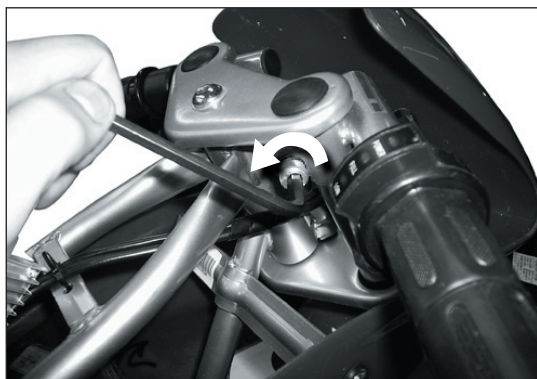


Figure 1a

#### Step 2: Install the new bolts

Using the same 5mm Allen wrench, screw in the new bolts with a washer and a lock washer (see Figure 1b).

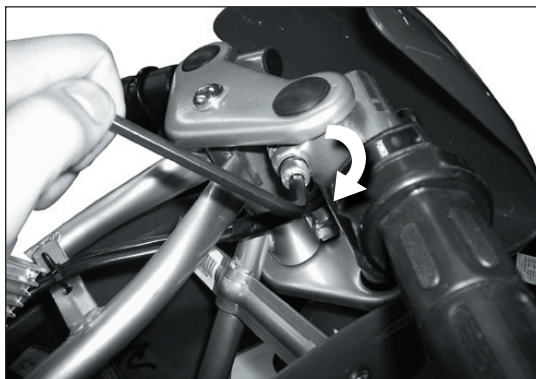


Figure 1b